

FORD BRONCO 21+ SHIFT KNOB INSTALL GUIDE

TOOLS REQUIRED

- SMALL FLATHEAD SCREWDRIVER OR PRY TOOL
- M3 ALLEN WRENCH
- RUBBER Mallet

1



REMOVE THE FACTORY SHIFT KNOB CAP WITH A PRY TOOL OR SMALL FLATHEAD SCREW DRIVER.

2



REMOVE THE SCREW HOLDING THE SHIFT KNOB WITH THE M3 ALLEN WRENCH.

3



PULL UP ON THE STOCK SHIFT KNOB.

4




INSTALL OUR SHIFT KNOB IN PLACE WITH THE LOCKING TAB ORIENTED CORRECTLY, THE KNOB SHOULD NOT SPIN.

5



REINSTALL THE OEM ALLEN SCREW TO SECURE THE SHIFT KNOB IN PLACE.

6

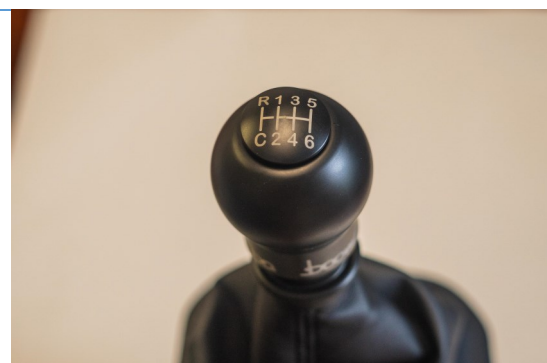

AFTER ALIGNING THE SHIFT CAP ON THE KNOB, USE A RUBBER Mallet WITH A TOWEL TO PREVENT SCRATCHES TO INSTALL THE CAP AND YOU'RE DONE!