


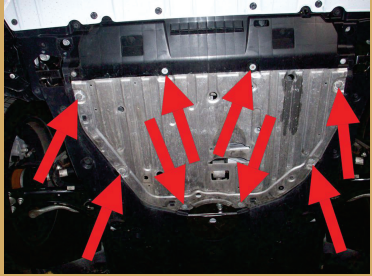
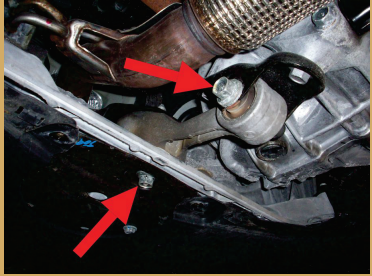
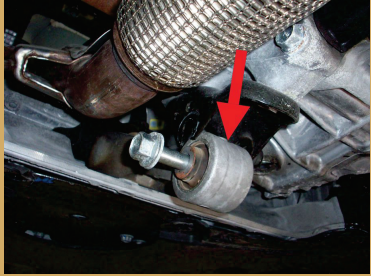

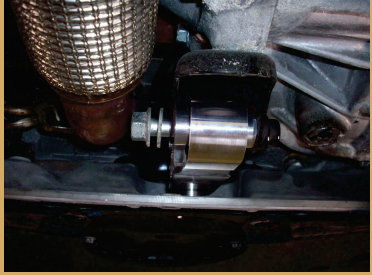

CIVIC SI 11G MOTOR MOUNT

TOOLS REQUIRED

Set of car stands	Phillips screw driver
M17 socket	Pry bar
M19 socket	
Flat screw driver	

MATERIALS REQUIRED

None

<p>1 When lifting the car always use stands to secure the car.</p> 	<p>2 Remove under tray.</p> 	<p>3 Remove the bolt connecting factory mount to the frame. Loosen up the bolt connecting factory mount to the transmission. Slide it out as much as possible.</p> 	<p>4 Pull the motor mount down and remove the bolt completely. Remove the motor mount sliding it forward.</p> 
<p>5 Prepare the Boomba Racing motor mount.</p> 	<p>6 Slide the Boomba Racing motor mount into the frame. Make sure the side marked "UP" is facing the top. Using pry bar move engine forward if necessary. Pry the Boomba Racing motor mount down to insert the mounting screw.</p> 	<p>7 Secure the Boomba Racing motor mount to the frame and to the transmission.</p> 	<p>8 Reinstall the under tray.</p> 