

CIVIC 11G

BOV ADAPTOR

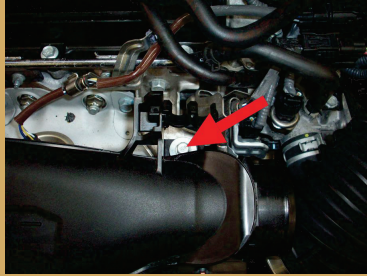

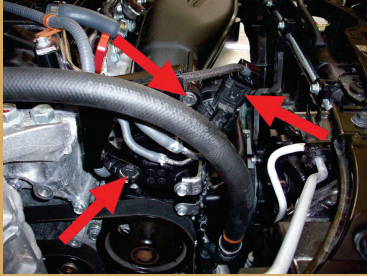
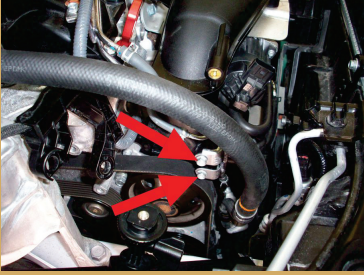
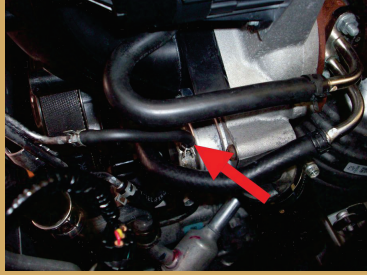
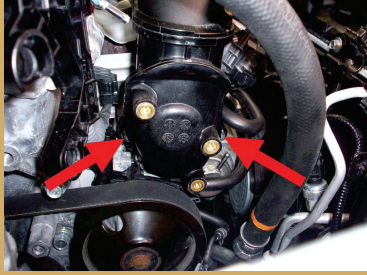

TOOLS REQUIRED

M5.5 socket wrench
M10 socket wrench
M12 socket wrench
5 MM allen wrench
T30 TORX

Pliers

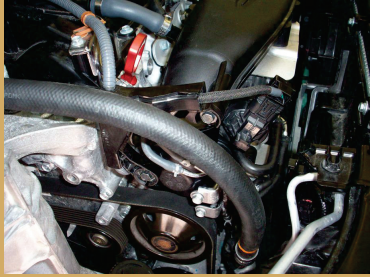
MATERIALS REQUIRED

None

<p>1</p>	<p>Remove the air supply hose. Remove the vacuum connector.</p>	<p>2</p>	<p>Remove the air tube top bolt.</p>	
				
<p>5</p>	<p>Remove the vacuum line bracket.</p>	<p>6</p>	<p>Disconnect the vacuum line from the blow off valve.</p>	
		<p>7</p>	<p>Remove the screw and the nut securing air tube to the turbo housing.</p>	
<p>9</p>	<p>Prepare the Boomba Racing blow off valve adaptor for installation.</p>		<p>8</p>	<p>Remove the OEM blow off valve.</p>
	<p>10</p>	<p>The blow off valve's vacuum pipe should be lined up with the logo on the Boomba Racing blow off adaptor.</p>	<p>11</p>	<p>Install the OEM blow off valve and the Boomba Racing blow off adaptor with the provided bolts. Reconnect the vacuum to the blow off valve.</p>
			<p>12</p>	<p>Reinstall the air tube.</p>
				

13

Reinstall the vacuum bracket, the wire harness bracket and reconnect the wastegate's electrical connector.



14

Reinstall the coolant surge tank.



15

Reinstall the vacuum connector and the air hose.

