



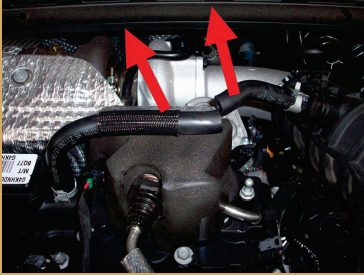




ELANTRA N CATCH CAN S1

TOOLS REQUIRED

M10 socket wrench
4 MM allen wrench
Razor blade

MATERIALS REQUIRED

<p>1</p> <p>Prepare Elantra N Stage 1 mounting kit.</p>	<p>2</p> <p>Secure the mounting bracket to the Catch Can</p>	<p>3</p> <p>Mount the Catch Can beside the front driver side headlight using the existing bolts.</p>	<p>4</p> <p>Remove the engine cover.</p>
			
<p>5</p> <p>Cut the factory vent line.</p>	<p>6</p> <p>Rotate the vent line toward the fire wall.</p>	<p>7</p> <p>Connect the shorter vent hose to the "IN" port. Connect the longer vent hose to the "OUT" port.</p>	<p>8</p> <p>Route the vent lines behind the ECU and the filter box.</p>
			
<p>9</p> <p>Install the hose adaptors.</p>	<p>10</p> <p>Connect the vent from the valve cover to the "IN" port. Connect the vent from the intake to the "OUT" port.</p>	<p>11</p> <p>Use the zip ties to dress up the vent hoses. Install the engine cover.</p>	
