


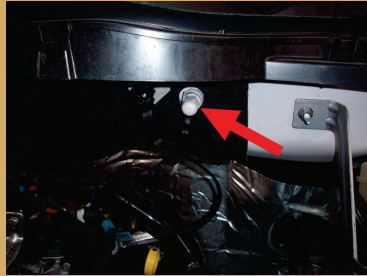

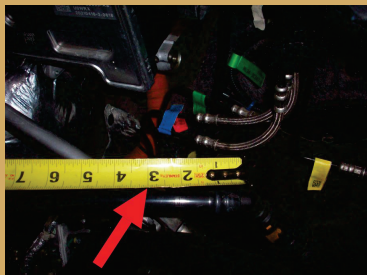




FORD F-150 CATCH CAN STAGE 1

TOOLS REQUIRED

M15 sockets
1/2 socket
M4 allen wrench
Box cutter
Heat gun
Work gloves

MATERIALS REQUIRED

<p>1</p> <p>Prepare the Catch Can installation kit.</p>	<p>2</p> <p>Prepare the Catch Can mounting bracket.</p>	<p>3</p> <p>Install the Catch Can's mounting bracket. Switch the Catch Can's fittings if necessary. "IN" should be on the left side. "OUT" on the right side.</p>	<p>4</p> <p>Remove the factory nut.</p>
			
<p>5</p> <p>Cut the vent line by the valve cover 3" from the fitting.</p>	<p>6</p> <p>Cut the vent line by the intake 3" from the fitting.</p>	<p>7</p> <p>Prepare the vent lines and the fittings.</p>	<p>8</p> <p>Push the smaller diameter of the fitting into the vent line.</p>
			
<p>9</p> <p>Heat up the remaining part of the factory vent line by the valve cover until soft and then push in the fitting with the longer vent line. WEAR HEAVY DUTY WORK GLOVES TO PREVENT BURNS.</p>	<p>10</p> <p>Heat up the remaining part of the factory vent line by the intake until soft and then push in the fitting with the shorter vent line. WEAR HEAVY DUTY WORK GLOVES TO PREVENT BURNS.</p>	<p>11</p> <p>Install the Catch Can and secure it with the provided nut.</p>	<p>12</p> <p>Connect the vent lines. Longer hose to "IN", shorter hose to "OUT". Use the zip ties to dress up the vent lines.</p>
