



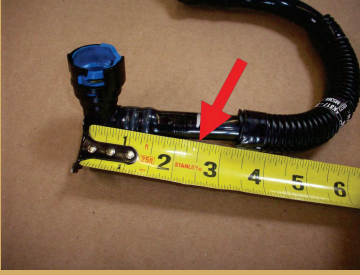
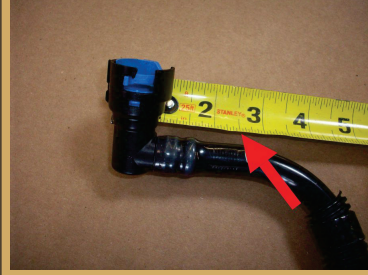




# FORD F-150 CATCH CAN STAGE 2

## TOOLS REQUIRED

M15 sockets  
1/2 socket  
M4 allen wrench  
Box cutter  
Heat gun  
Work gloves

## MATERIALS REQUIRED

<p><b>1</b></p> <p>Prepare the Catch Can installation kit.</p>	<p><b>2</b></p> <p>Install the Catch Can's mounting bracket. Switch the Catch Can's fittings if necessary. "IN" should be on the left side. "OUT" on the right side.</p>	<p><b>3</b></p> <p>Remove the factory nut.</p>	<p><b>4</b></p> <p>Remove the factory vent line.</p>
			
<p><b>5</b></p> <p>Cut the vent line 2.5" from the fitting.</p>	<p><b>6</b></p> <p>Cut the opposite side of the vent line 2.5" from the fitting.</p>	<p><b>7</b></p> <p>Heat up the factory vent line until soft and then push in the larger diameter of the fitting into the remaining part of the factory vent line. <b>WEAR HEAVY DUTY WORK GLOVES TO PREVENT BURNS.</b></p>	<p><b>8</b></p> <p>Push the smaller diameter of the fitting into the vent line.</p>
			
<p><b>9</b></p> <p>Secure both sides of the fittings with hose clamps.</p>	<p><b>10</b></p> <p>Install the Catch Can and secure it with the provided nut.</p>	<p><b>11</b></p> <p>Connect the modified vent lines to the engine. The longer line to the intake. The shorter line to the valve cover.</p>	<p><b>12</b></p> <p>Connect the vent lines. Longer hose to "OUT", shorter hose to "IN". Secure the vent lines with the hose clamps. Use the zip ties to dress up the vent lines.</p>
