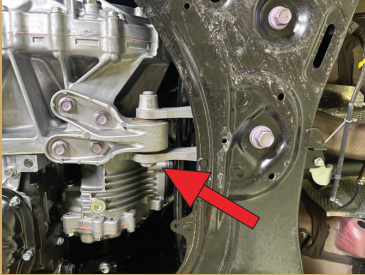
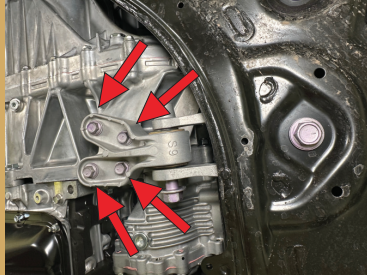
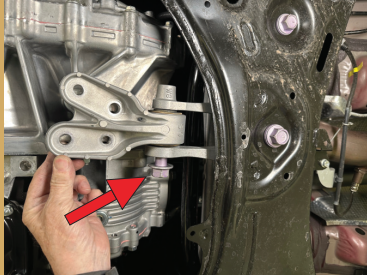

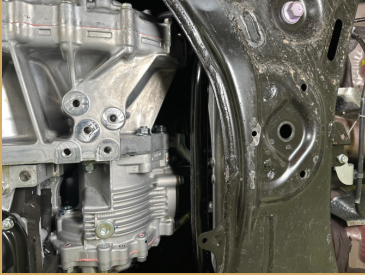



GR COROLLA REAR MOTOR MOUNT

TOOLS REQUIRED

Socket Driver
10mm Socket
14mm Socket
22mm Socket
24mm Socket
Trim tool or Flathead
Screwdriver

MATERIALS REQUIRED

<p>1</p>	<p>Remove undertray to reveal stock motor mount. Loosen the bolt securing the two stock motor mount pieces</p>	<p>2</p>	<p>Remove the bolts securing the rear section of the mount.</p>
			
<p>5</p>	<p>Install the motor mount parts loosely with factory bolts.</p>	<p>6</p>	<p>Install bolt loosely with provided nut to connect both mount pieces.</p>
		<p>7</p>	<p>Secure all motor mount bolts.</p>
			<p>8</p>
			<p>Reinstall undertray.</p>
			