

VOLKSWAGEN GTI Mk8

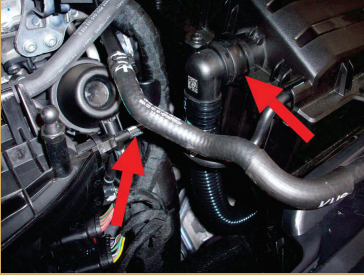
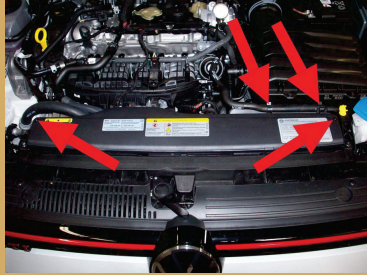
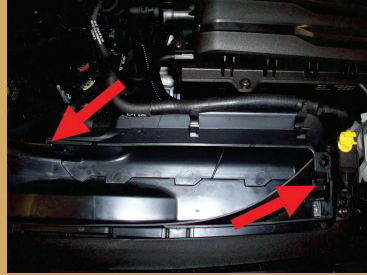
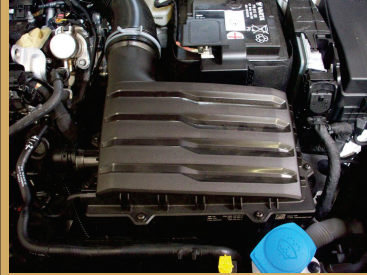
SHIFTER PLATE

TOOLS REQUIRED

T25 Torx bit
4 MM allen wrench
Small flat screw driver

MATERIALS REQUIRED

None

1	disconnect the vent lines from the air filter and the valve cover.	2	Remove the coolant line from the clips. Remove the air box' cover.	3	Remove the air snorkel.	4	Remove the air filter box and lay it on the top of the valve cover.
							
5	Remove the locking clip from the shifter link. Remove the shifter link.	6	Install the Boomba Racing shifter plate. Secure plate to the shifter arm with the provided screws.	7	Install the shifter link and lock it with the clip.	8	Reinstall the filter box, the air snorkel and the air box cover. Lock the coolant line in place. Reconnect the vent lines.
