

# 22+ SUBARU WRX CATCH CAN STAGE 2

## TOOLS REQUIRED


M7 Socket  
M12 Socket  
Flat Screw Driver  
M4 Allen Wrench  
Needle Nose Pliers  
Hose Cutter

## MATERIALS REQUIRED

<p><b>1</b></p>	<p>Remove the intercooler mounting bolts.</p>	<p><b>2</b></p>	<p>Loosen the hose clamp on charge pipe.</p>
			<p><b>4</b></p> 
<p><b>5</b></p>	<p>Cut PCV hose approximately 1" from the bottom end of the hose and a 1.5" section.</p>	<p><b>6</b></p>	<p>Switch the hose clamps. Black clamp on the shorter hose and the silver clamp on the longer hose.</p>
		<p><b>7</b></p> 	<p><b>8</b></p> 
<p><b>9</b></p>	<p>Install hose adaptors on OEM hoses and secure with provided hose clamps. Insert clamps on provided hoses and place longer hose on intake side and the shorter on the engine block side.</p>	<p><b>10</b></p>	<p>Reinstall intercooler, route hoses to passenger side.</p>
	<p><b>11</b></p> 	<p><b>12</b></p> 	<p>Install mounting bracket on Boomba Racing Catch Can.</p> 

13

Insert hose from intake manifold to "OUT" port on catch can and hose from engine block to "IN" port on catch can. Secure with provided hose clamps.

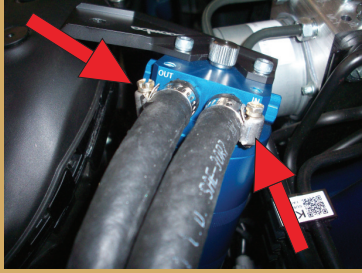

14

Mount Boomba Racing Catch Can.



15

Tighten down all intercooler bolts and secure charge pipe hose clamp.

